Mind Blowing Inflatables

Inflatables Extraordinarios!



2425 Enterprise Drive, Suite 600 Mendota Heights, MN 55120 | USA


Toll Free: 1-800-811-7002

Local: 651-209-8600 Fax: 651-925-0215

www.nflatables.com

©2013 Great Air, Inc. d/b/a N-Flatables. All Rights Reserved.

Cutting Edge Creations, the Cutting Edge Creations logo, are all trademarks of Great Air, Inc. d/b/a N-Flatables, registered in the U.S. and other countries. WATCHDOG, the WATCHDOG logo, are trademarks of Safety Air Systems, LLC., registered in the U.S. and other countries.

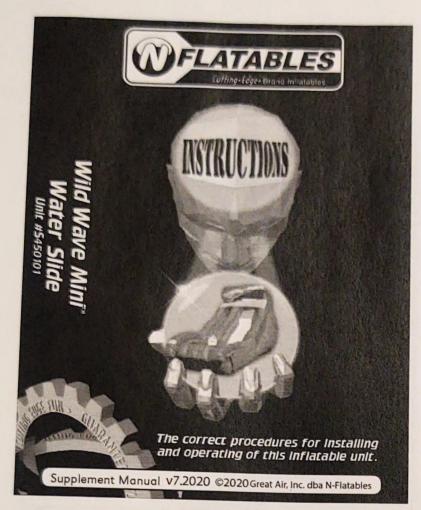

WILD WAVE MINI™ WATER SLIDE

H W L 14'x 12' x 26'

UNIT #\$450101 WEIGHT: 395 lbs.

1-Piece Unit includes: (1) removable slide lane, (1) removable climbing surface, (1) pool liner, (4) giant deflation zippers, tether kit: (4) top tethers, (5) bottom tethers, mattress reinforcement strips and carrying bag. Recommended load: (2) patrons over 34" tall, maximum height not to exceed 60" tall, 150 lbs. suggested maximum weight per patron.

When using this slide in conjunction with water, remove the wear covers after each use and thoroughly dry all surfaces before reinstalling the covers.

This Unit Requires 1 Blower(s) to Function Properly. CEC Suggests the following Blower Types:

High Volume Output 1.0-1.5 hp; Minimum 1170 CFM

EXTENSION CORD REQUIREMENTS: 12/3 SJOW
BLOWERS MUST BE CONNECTED TO A GFCI ELECTRICAL OUTLET.

All information included in this supplement is kept current and up-to-date. N-Flatables reserves the right to update this information from time to time as needed.

All materials have been tested and comply to NFPA 701 TEST 2 and the California Title 19 fire rating test. This Inflatable Amusement Device complies to the ASTM F2374-17 standards for safety, where applicable to the specific use of this Inflatable Device. Instruction Supplement and General Installation Manuals are included with this unit.Inflatable devices exposed to the elements cannot be used by patrons while raining and or snowing, unless the device is specifically designed to be operated in those conditions. It is YOUR RESPONSIBILITY to read and follow these important instructions to prevent injury for your patrons using this device!

Wild Wave Mini* Water Slide

Congratulations on your purchase of the Wild Wave Mini Water Slide.

We know that you'll get many hours of excitement from your new purchase. Please read this booklet carefully, being sure to read all of the safety precautions and the do's and don'ts of the ride.

Remember to stake (tether) your inflatable as described in the "Installation and Setup" booklet, and be sure to have a minimum of (1) trained operator as defined in the booklet.

Once again, we thank you for doing business with us, and call us if you have any questions.

Sincerely,


N-Flatables / Cutting-Edge Brand Inflatables



2425 Enterprise Drive, Suite 600 Mendota Heights, MN 55120



Toll Free 1-800-811-7002 • Local 651-209-8600 • Fax 651-925-0215 www.cuttingedgecreations.com

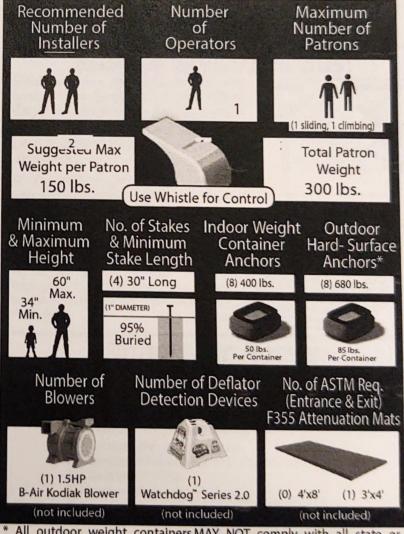


* All outdoor weight containers MAY NOT comply with all state or municipal tethering requirements for inflatable devices.



ALWAYS contact the utility company before pounding stakes into the ground!



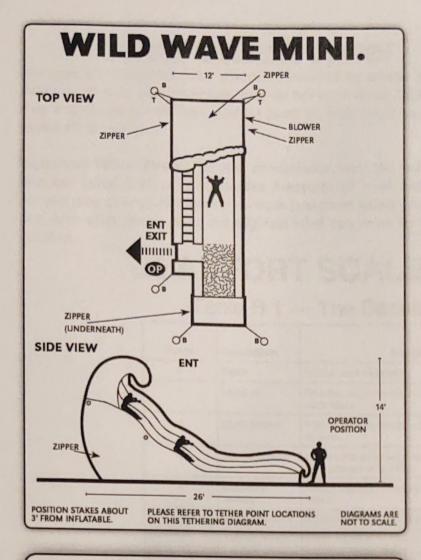

DAILY INSPECTION **CHECKLIST OF INFLATABLE** Check to see if blower(s) is attached properly and securely to inflatable device. Make sure all deflation zippers are closed and secured. Check blower electric attachment to be sure it has been properly plugged in to receptacle. Make sure blower system has no obstruction restricting intake on sides of blower. Check inflation of unit to be sure it is properly inflated to Make adjustments to slide and climb covers if necessary to proper secure position. Covers need to be adjusted before each use to assure that all wrinkles are removed that could potentially cause injury. Also it is important to inspect all covers showing signs of wear are replaced before using this device. Make sure all tether points are attached properly. Check netted areas and sun covers to be sure they are in place and in good condition. Crawl through (if possible) inflated device and examine all visible seams for stretching or wear. If problems with any seams contact manufacturer to advise. Inspect the inflatable for loose stitching causing open seams, torn netting, worn holes in bottom or sides of unit. If found, cease use and repair immediately using supplied repair kit. Or if a hole or seam is open more than 1 - 2 inches, professionally repair using 207 polyester thread from a reputable inflatable repair center.

Directions (Water Slide)

- · Read instruction booklet.
- Remove unit from storage bag.
- Position on a level ground area approximately 18'x32'.
- Install ground stakes, at least (5) around perimeter.
- Loosely tie tethers to ground stakes.
- Attach (1) 1.5HP blower(s) to tubes, making sure Velcro strap is firmly
- · Close zippers & flaps on all locations of unit and make sure they are secure.
- Connect each blower to its own power source. Keep in mind that each blower used will require a constant supply of 110-volt, 20-amp power.

This device requires the use of a G.F.C.I device between the outlet and the blower system.


- Make sure water supply system is in place and attached properly to inflatable.
- Turn blower system on and guide the unit until it is fully inflated.
- · Secure all tethers after the unit is fully inflated. To check proper inflation, operator must stand in center of inflatable surface checking that depression (Deflection) does not exceed 4" from level surface.
- · Do a safety check of blowers, slide & climb covers.
- · Do not operate this unit in winds in excess of 15 mph.

NEVER LEAVE THIS RIDE UNATTENDED!

KEY TO DIAGRAM

- T = Top Tether
- B Bottom Tether ENT - Entrance
- EXIT = Exit
- = Evacuation
- Blower Locations ZIP Deflation Zipper OP - Operator Position

Static Dimensions (in bag)



Dynamic Dimensions (inflated)




Staking Specifications:

Make sure that all stakes are securely pounded into the ground, burying 95% of the stake as shown in the diargam at right:

STAKES USED MUST BE A MINIMUM OF 1" DIAMETER AND A MINIMUM OF 18" LONG.

Safety glasses should be worn when pounding stakes to avoid potential

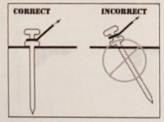

Use Impact Mat:

To further reduce the possibility of injury, put an impact mat at the base of the entrance of the inflatable (not included).



Important Notice:

Specifications for Inflatable Devices may change based on reconfigura-tions that may be required for the proper use of an inflatable device.

These changes may include, but not be limited to, the following:

- 1) Maximum Heights of Patrons.
- 2) Minimum Heights of Patrons.
- 3) Number of Patrons (on a device at one time).
- 4) Maximum Weight
- 5) Number Of Stakes
- 6) Size of Stakes
- 7) Number of Blowers
- 8) Overall physical dimensions of the device.

Any noted current changes made to any inflatable device will be updated on our website: http://www.cuttingedgecreations.com.

Wind Catastrophe!

This type of catastrophe can always be avoided by proper tethering, utilizing 24" long ground stakes, and by having trained operators on duty and avoiding inclement weather (such as high winds i.e. winds in excess of 15 m.p.h.).

Beaufort Wind Scale. For your convenience, we have included the Beaufort Wind Scale which provides measures of wind force and a general idea of what to expect from each (see chart below). As you can see, even what seems to be the slightest wind can never be taken for granted.



BEAUFORT SCALE OF WIND FORCE

Table B.1 --- The Beaufort Scale of wind force

Force	Description	Identification	Wind speed	
			mph	km/h
0	Calm	Smoke rises vertically	<1	<0,62
1	Light air	Direction of wind shown by smoke drift, but not by wind vanes	1 to 3	1,08 to 5,4
2	Light breeze	Wild fet on fact; leaves rustle, wind dances moved by wind.	4 to 7	5,76 to 11,88
3	Gentle breeze	Leaves and small twigs are in constant motion. The wind extends a light flag.	8 to 12	12,24 to 19,44
4	Moderate breeze	Raises dust and loose paper. Small branches are moved.	13 to 18	19,8 to 28,44
5	Fresh breeze	Small trees in leaf begin to sway.	19 to 24	28,8 to 38,52
6	Strong breeze	Large branches in motion. Whistling heard in telegraph wires. Umbrellas difficult to use.	25 to 31	38,88 to 49,68
7	Near gale	Whole trees in motion. Inconvenience felt when walking against wind.	32 to 38	50,04 to 61,56
8	Gale	Twigs break off trees.	39 to 46	61,92 to 74,52
9	Strong gale	Slight structural damage occurs. Chimney pots and slates are dislodged.	47 to 54	74,88 to 87,84
10	Storm	Trees uprooted. Considerable structural damage occurs.	55 to 63	88,2 to 102,24
11	Violent Storm	Widespread damage occurs.	64 to 72	102,6 to 117,3
12	Hurricane		>73	>117,72

Standard Method to Fold & Roll an Inflatable

- 1. Begin by folding the inflatable into even thirds or quarters. Remember to leave an open deflation zipper at one end.
- 2. Try to keep each 3. Once folded, fold flush with the layers abover and below it.
 - begin rolling the inflatable TOWARDS the end with the open deflation zipper.
- 4. As you roll, take care to depress trapped air out in front of the roll to ensure a tight even roll.
- 5. Secure the roll with a wrapping strap, cinch, and then stand the unit on one of the coiled ends of the roll. Slide the storage bag over the top and slide down over the rolled inflatable. Cinch bag and then store.












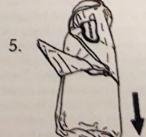

Step by Step Procedure: Wild Wave Mini*



1. Enter the unit by going through side of the



2. Climb up the hill to the slide, using the safety handles!



3. Position yourself correctly.



4. With arms crossed, slide down the hill feet first. No Diving!




5. Get ready to get wet as the slide carries you into a pool of water!



6. Exit unit, with the help of the operator if necessary.

CAUTION: Material may be slippery when wet.

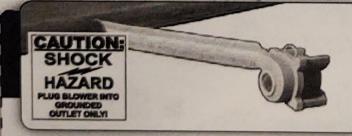

Keep Blower Away!

- · Operators need to keep blower away from the unit.
- Use a grounded outlet only for blower system.
- Caution! electric shock may occur if blower gets wet.

Improper use of this inflatable may cause serious injury!



ASTM Standard #F7324-06 6.6.1 Operators & attendants shall incorporate the use of whistles or other devices or signal equipment & take appropriate action at the first sign of misbehavior or violation of posted rules.



Evacuation Procedures!

The blower tube has an automatic air flap that reduces the loss of air if the blower system goes off. In the event of a power outage or emergency take-down, direct patrons off the inflatable as shown by arrows in the diagram shown above

Make sure all operators understand the proper procedures for using this inflatable, and that passengers must follow the rules.



Deflation Rate of Inflatable:

Type of Testing: Observed Deflation Rate to unsafe conditions: 3-5 minutes.



Avoid Contact with Others!

Passengers must be instructed to use or ride unit individually. Do NOT allow doubleriding, as accidents WILL happen!



Do Not Hit Your Head!

DO NOT dive or enter unit head first, as head or neck injuries may occur!



Keep Landing Areas Clear!

Operators should not allow participants to land on one another. Accidents WILL



Instruct Safety!

Instruct riders to follow the safety rules located on entrance side of unit. NO flipping, as injuries may occur!



Watch Out for High Temps!


DO NOT operate when temperatures exceed 90-degrees. Watch for early signs of heat exhaustion and for dehydration.

Important! Use and Indemification:



Buyer" (person, company or entity purchasing the inflatable product or device). is solely responsible for the manner of use of the products and other equipment purchased from N-Flatables. "Buyer" is solely responsible for all signage, labels and warnings to consumers or other users of the products and equipment, and for any and all other acts necessary, including user warnings and limitations (e.g., weight, height, age, number of participants and medical condition limitations), to ensure the safety of the users. "Buyer" acknowledges that they have received, read and fully understand all necessary instructions for the safe setup and operation of their Cutting Edge Creations (BRAND) inflatable product or device. "Buyer" agrees to operate their Cutting Edge Creations (BRAND) inflatable product or device according to the instructions established by Cutting Edge Creations (BRAND). "Buyer" agrees to operate their inflatable product or device according to all state and local requirements. "Buyer" agrees to train any person(s) operating the inflatable product or device in the safe operation of the inflatable product or device including safe handling of emergency situations. "Buyer" shall use proper stakes, tie-downs, and other applicable devices necessary to ensure the safety of users and the general public. "Buyer" agrees to indemnify, defend and hold harmless N-Flatables and N-Flatables Insurers from actions and claims of third parties, including customers of "Buyer" and users of the goods and products sold to "Buyer", arising out of or in connection with the use of the goods and products herein described or resulting from the breach of the provisions in this Confirmation of Order by "Buyer". In the event N-Flatables is required to commence an action to enforce this provision, "Buyer" shall pay all of N-Flatables legal costs and expenses.

WATER DELIVERY SYSTEM

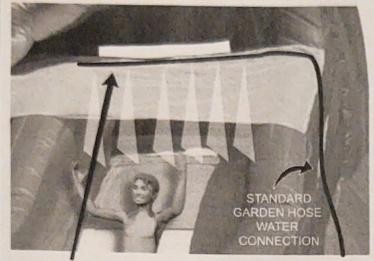

SOAKER/SWEAT HOSE BETWEEN VINYL SLEEVE AND MESH SCREEN COVER



SWEAT HOSE



Optional Safety sign:

ADVERTISEMENT

"The Inflatable Experience™"


Avoid such potential liability problems with this information board prepared especially for the inflatable

industry! This durable double-sided "A" framed sign list the sensations that one may experience, such as 'dizziness or vertigo, possible strain on knees and elbows' and 'a bouncy feeling with a recoil action', etc...




- ADVERTISEMENT

AVOID A DISASTER!

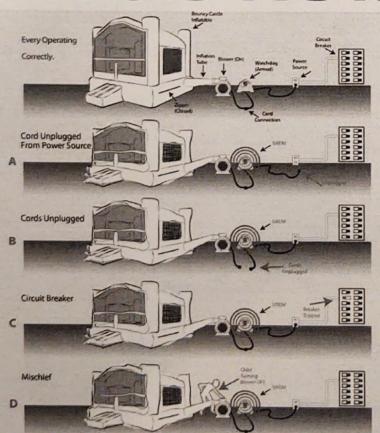

The Watchdog™ 2 Blower-Siren is the future of inflatable Safety! Avoid these potential disasters and Save on your Insurance Premiums.



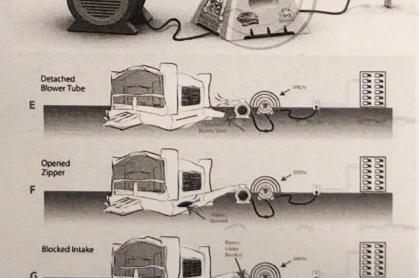

ADVERTISEMENT